

OPERATION AND MAINTENANCE MANUAL

MICROFLAME GAS GENERATOR

<u>CONTENTS</u>	<u>PAGE</u>
DIAGRAM OF MICROFLAME MACHINE	
1. <u>INTRODUCTION</u>	2
1.1 WARNING	2
1.2 DESCRIPTION	2
1.3 APPLICATIONS	3
2. <u>OPERATION</u>	3
2.1 SETTING UP	3
2.2 INSTALLATION	3 to 4
2.3 FILLING THE CELL	4
2.4 FILLING THE GAS BOOSTER	4 to 5
2.5 ELECTRICAL CONNECTIONS	5
2.6 OPERATION OF THE MACHINE	5
2.7 STARTING UP AND USE	5 to 6
2.8 CHECKING FOR GAS LEAKS	6
2.9 OPERATING CHECKS	6 to 7
2.10 GAS BOOSTER LIQUID	7 to 8
2.11 SELECTION OF TORCH TIP	8
2.12 LIQUID LEVELS	8 to 9
3. <u>MAINTENANCE</u>	9
3.1 REGULAR CHECKS	9
3.2 TORCH	9
3.3 FAULT FINDING CHECK LIST	10 to 12
FIG.1 GAS BOOSTER LIQUIDS	7
FIG.2 TORCH TIP SIZES	8

